




## Quick-Shot™ Instructions

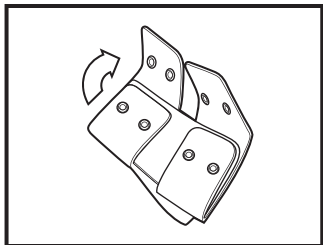


1. Unsnap rear flaps

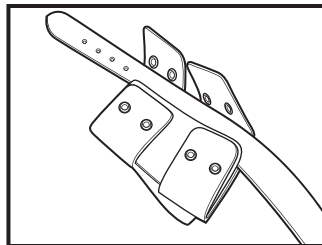


2. Insert belt in front of rear section

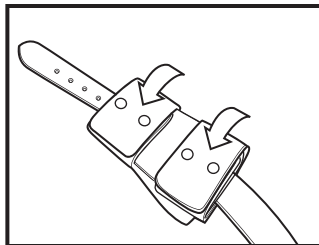


3. Close flaps and secure snaps

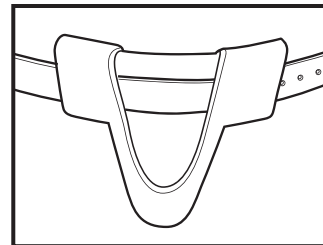



4. Belt should be visible from front

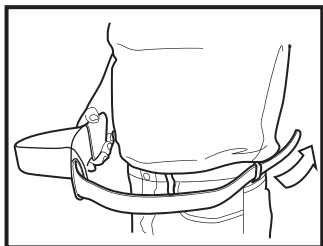

5. Put on belt keeping buckle to one side. (Optional: If using a standard size belt, the belt can be threaded through belt loops skipping both the first and last loops.)

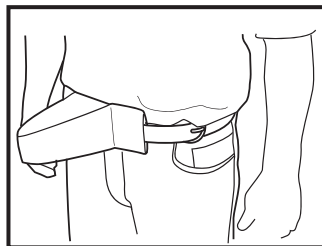

6. Tighten belt as much as possible for maximum support. Re-tighten belt as necessary to maintain support.

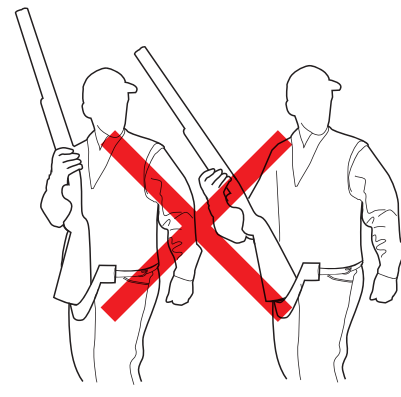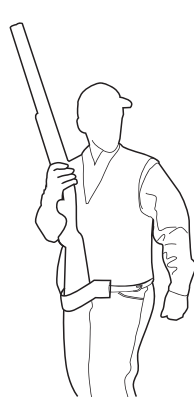

**WARNING:** Butt of firearm must be **FULLY** inserted into the **Quick-Shot™** to ensure proper firearm support. Always keep one or more hands on the firearm for stabilization. Do not use the **Quick-Shot™** with a loose belt, because the firearm may point in an unsafe direction.

DISCLAIMER: Perigrine Outdoor Products, LLC will not be responsible for damage or injury due to improper usage of the **Quick-Shot™**